


# AR-6 Operator Quick Reference


## Start Screen

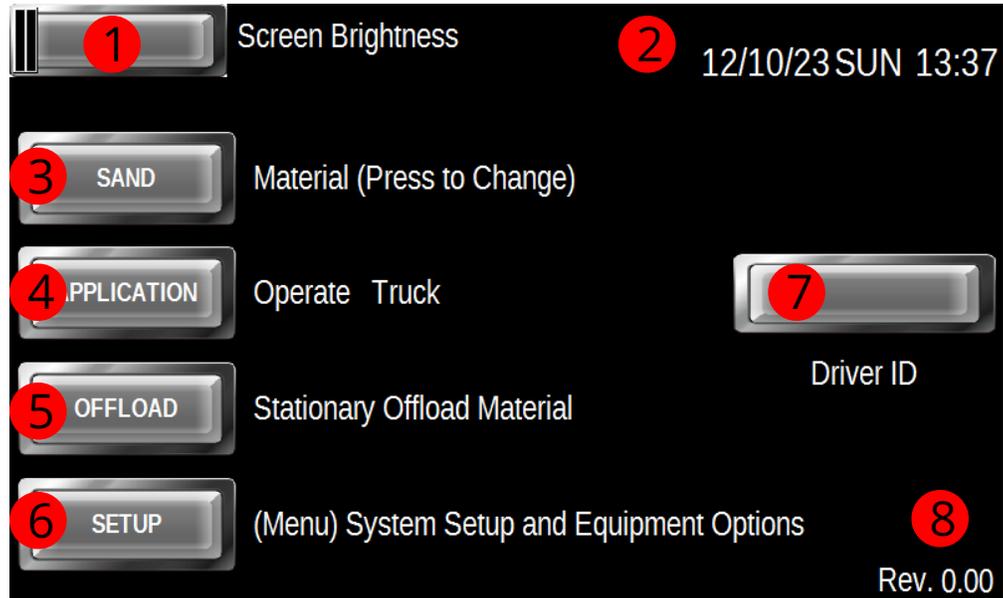

- 1** Screen Brightness Adjust Slider for day and night driving
- 2** Current Date and time
- 3** Material Selector (Blank if System is Ant-Ice or Truck Mode)
- 4** Start Application
- 5** Offload Material
- 6** Setup (Have to have Key Fob in USB Port)
- 7** Driver or Route ID (Optional)
- 8** System Firmware Revision Number

# AR-6 Operator Quick Reference


## Sander Screen

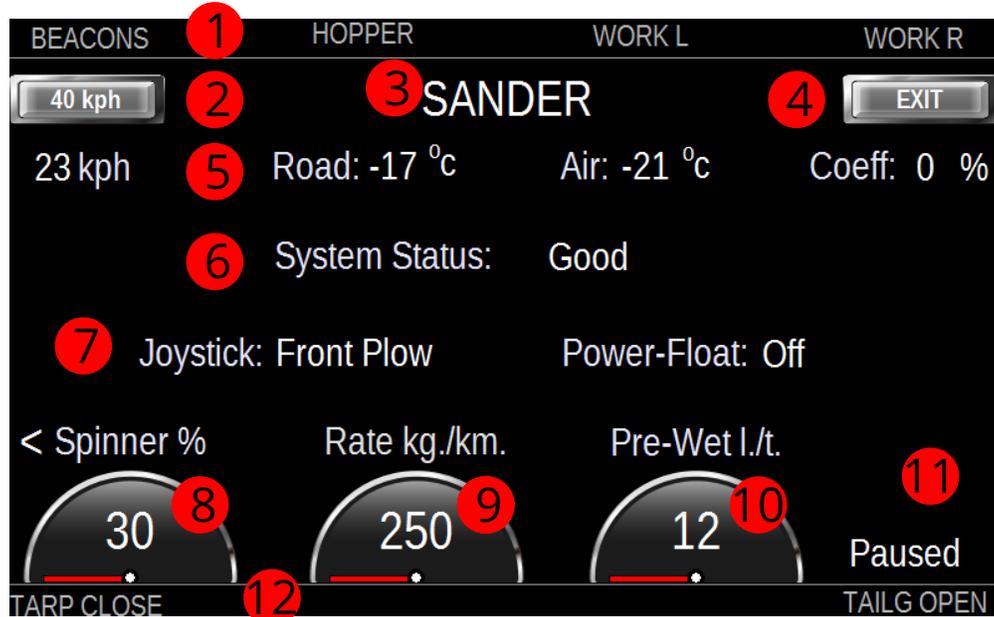

- 1 Lighting Information
- 2 Simulate 40 kph Speed for stationary testing (Alt. Ground Speed)
- 3 System Type and Alarms Display
- 4 Exit Sanding System and return to Start Screen
- 5 Environment Bar (Truck Speed Road/Air Temp and Coefficient of Friction)
- 6 System Status to show any Alarm Conditions
- 7 Joystick and Power-Float Modes Bar
- 8 Spinner Setting (Press Knob for 2 Seconds to Change Direction)
- 9 Application Rate Kg/km
- 10 Pre-Wet Rate l/t
- 11 Sander or Pause Display
- 12 Tarp and Tailgate Status Bar

# AR-6 Operator Quick Reference


## Sander Offload Screen

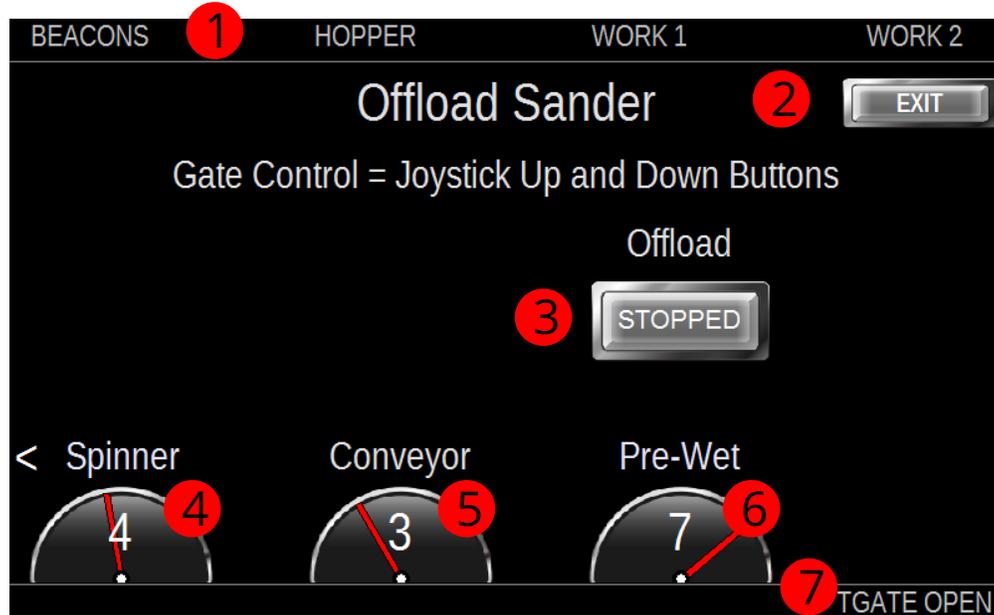

- 1 Lighting Information
- 2 Exit Sanding System and return to Start Screen
- 3 Offload Control (Press to Start and Stop Offload)
- 4 Offload Spinner Setting
- 5 Offload Conveyor Setting
- 6 Offload Pre-Wet Setting
- 7 Tarp and Tailgate Status Bar

# AR-6 Operator Quick Reference


## DLA Anti-Ice Screen

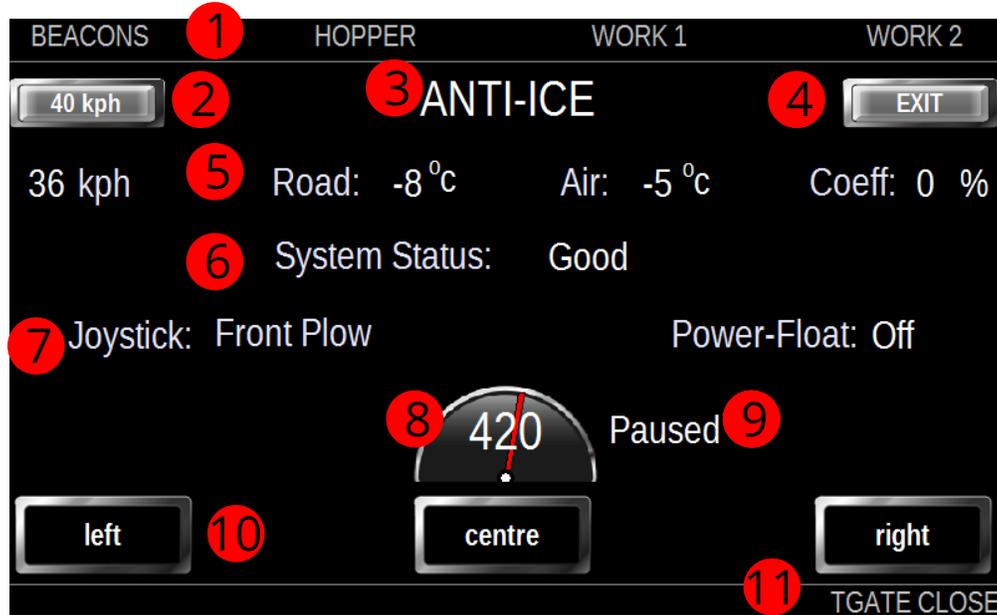

- 1 Lighting Information
- 2 Simulate 40 kph Speed for stationary testing (Alt. Ground Speed)
- 3 System Type and Alarms Display
- 4 Exit Sanding System and return to Start Screen
- 5 Environment Bar (Truck Speed Road/Air Temp and Coefficient of Friction)
- 6 System Status to show any Alarm Conditions
- 7 Joystick and Power-Float Modes Bar
- 8 Anti-Ice Application Rate (Litres per Lane Kilometer)
- 9 Anti-Ice or Pause Display
- 10 Lane Status Bar (Upper Case is Open)
- 11 Tarp and Tailgate Status Bar

# AR-6 Operator Quick Reference

## DLA Anti-Ice Offload Screen

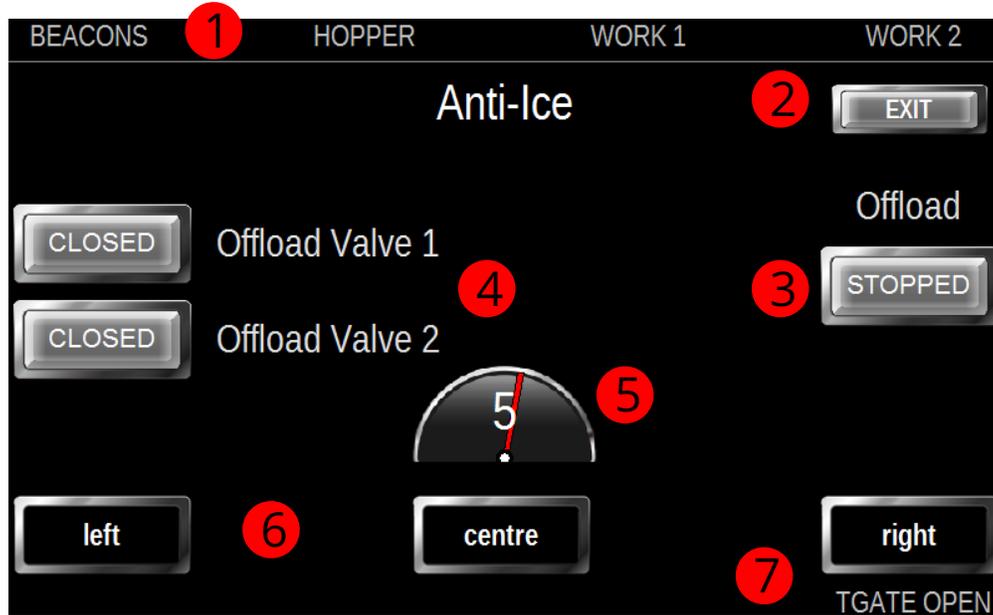

- 1 Lighting Information
- 2 Exit Anti-Ice Offload and return to Start Screen
- 3 Offload Control (Press to Start and Stop Offload)
- 4 Offload Control Valves (Press to Open and Close)
- 5 Offload Anti-Ice Rate Setting
- 6 Anti-Ice Lane Status (Uppercase is Open)
- 7 Tarp and Tailgate Status Bar